



# Medius Slide Rail Installation Reference Guide


## 1. Slide Rail : Special Feature (1)

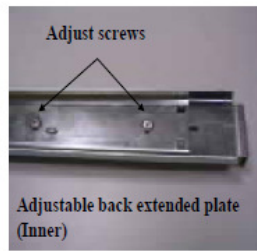


## 2. Special Feature (2)

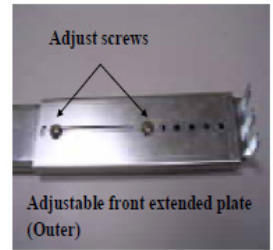


## 3. Installation Step 1 : Install Inner Rail to Chassis

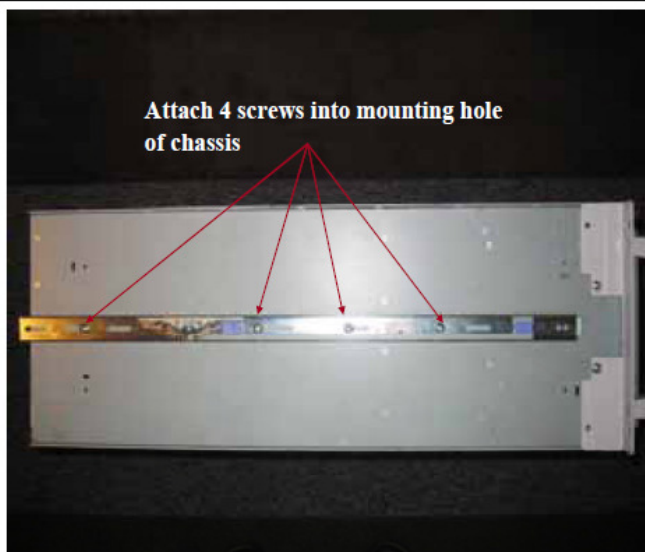


## 4. Installation Step 2 : Outer Rail Preparation (I)

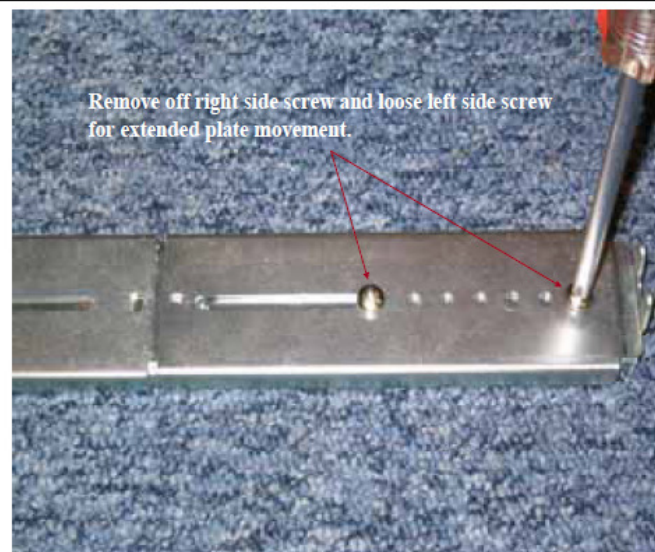


**5. Installation Step 3 : Outer Rail Preparation (II)**

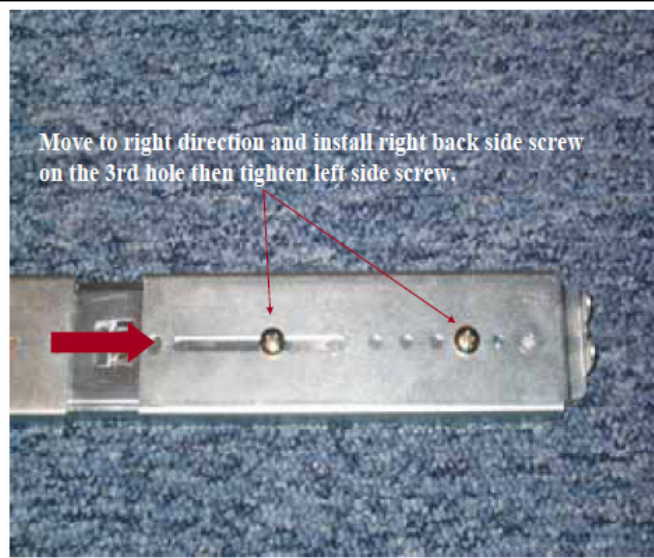

**6. Installation Step 4 : Outer Rail Preparation (III)**

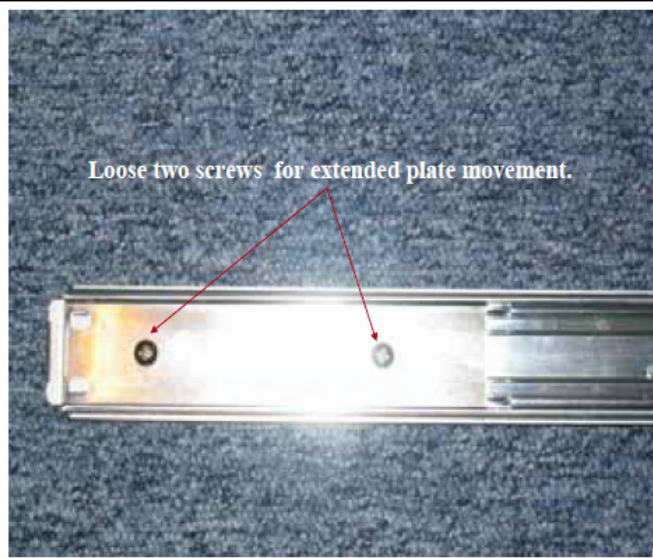


**7. Installation Step 5 : Cabinet Preparation**

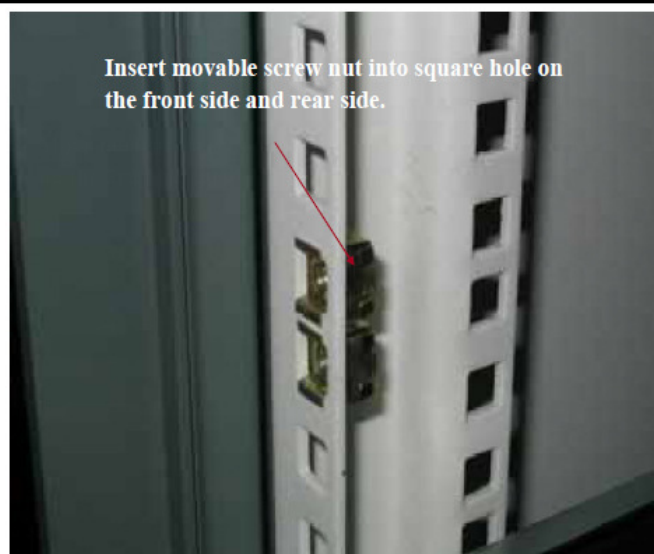


**8. Installation Step 6 : Attach Rail onto Cabinet (Front Side)**

Attach finger on the back side of screw nut then tighten screws from the back side to fix rail.

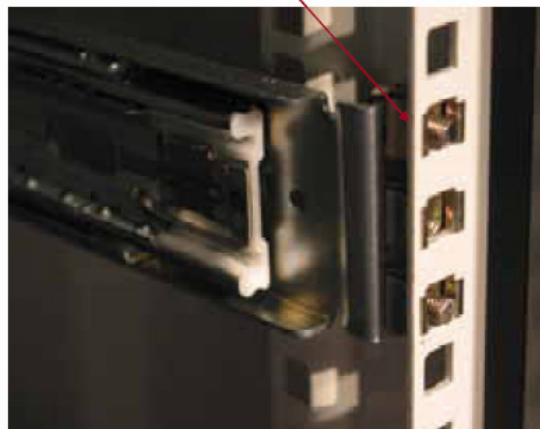


**9. Installation Step 7 : Attach Rail onto Cabinet (Rear Side)**

Attach finger on the front side of screw nut then tighten screws from the front side to fix rail.

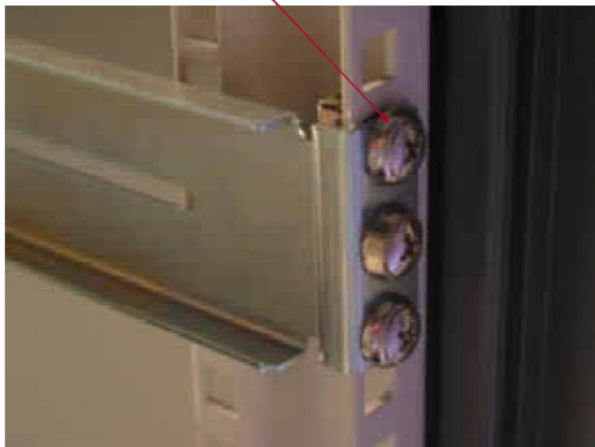


**10. Installation Step 8 : Finish Attaching Rail onto Cabinet**

Tighten 2 screws of extended plate.

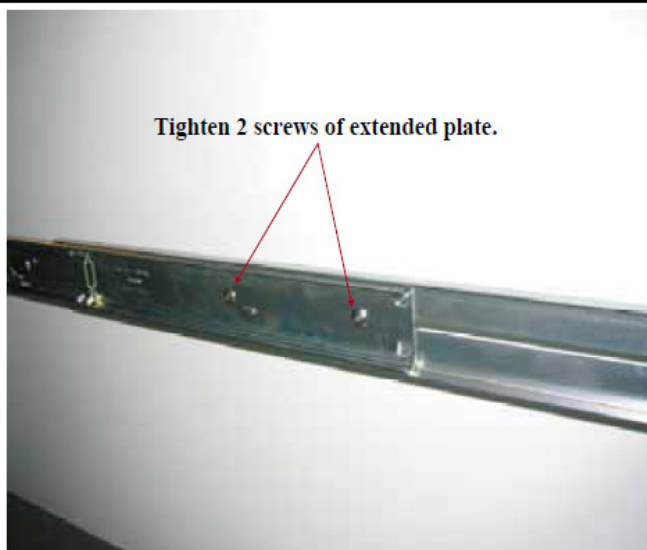

**11. Installation Step 9 : Load Chassis to Cabinet (I)**

Line the chassis with outer rail then push chassis into cabinet until lock in.

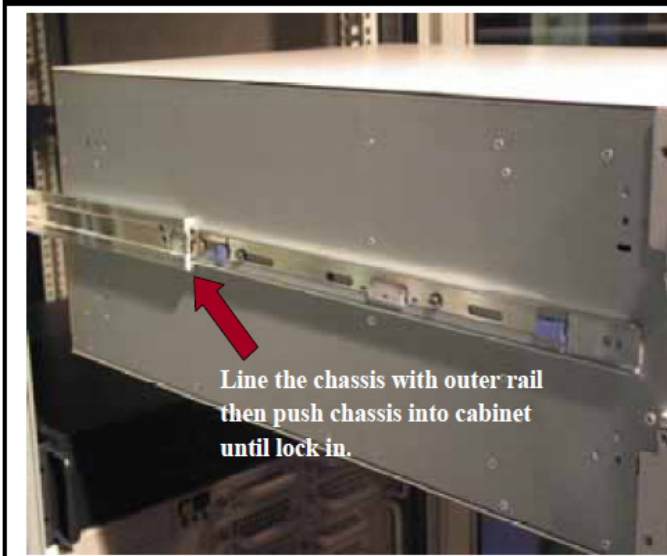


**12. Installation Step 10 : Load Chassis to Cabinet (II)**

Move latch toward handle direction then push chassis straight into cabinet.



**13. Installation Step 11 : Rack Mounting Hole (I)**

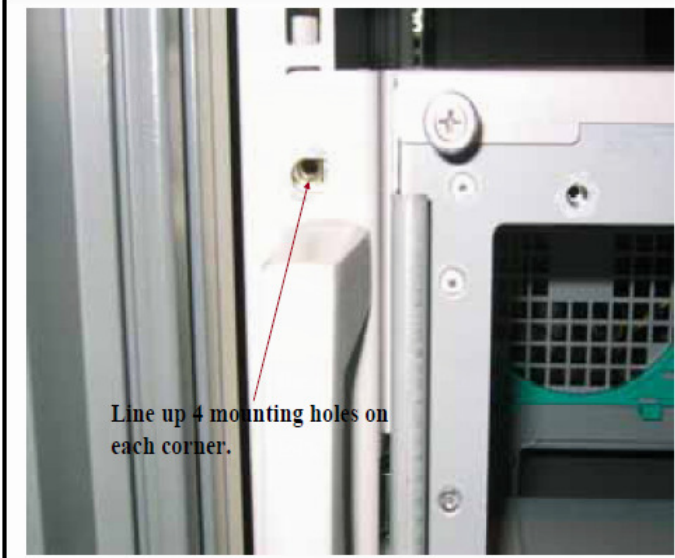

**14. Installation Step 12 : Rack Mounting Hole (II)**



**15. Installation Step 13 : DrawOut Chassis to Cabinet**

